

TeraPrint Produktunterlage

Gebrandete TeraPrint-Downloadunterlage

PRODUKT	3M™ 8150 Clear View
UNTERLAGE	Montageanleitung 3M Clear View 8150
TYP	installation
ORIGINALSEITEN	20
STAND	16.06.2026
DATEI	products/clear-view/assets/documents/257116c24edbb49bf8167e7d13f7e6e509ca67a118a12bd167d9a24066af8064.pdf

Wichtig fuer die Produktion

Die folgenden Originalseiten bleiben in Format, Reihenfolge und Inhalt unveraendert.
Druckmass, Schnitt, Beschnitt, Sicherheitsbereiche und technische Vorlage wurden nicht veraendert.
Bei Zertifikaten, Datenblaettern und Pruefberichten bleiben Aussteller und Originalinhalte unveraendert.

TeraPrint Hinweis

Diese Datei ist lokal bei TeraPrint gespeichert und fuer den Kunden-Download vorbereitet.
Bitte bei Druckdaten immer die Massangaben und Beschnitt-/Sicherheitszonen der Originalvorlage beachten.
Bei Unsicherheit vor Bestellung oder Produktion TeraPrint kontaktieren.



Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 1:

Prepare the surface:

Spray water with detergent (soap) on complete application area.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 2:

Prepare the surface:

Wipe the wet window with a towel to remove dirt particles. No need to wipe the window dry.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 3:

Prepare the surface:

Spray the detergent water again on complete application area.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 4:

Prepare the surface:

Remove the water with a squeegee. Squeeze tight to clean the window from lubrications.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 5:

Prepare graphic installation:

Spray detergent water on a window next to the application area ...





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 6:

Prepare graphic installation:
... and stick the graphic backside (liner) up.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 7:

Prepare graphic installation:

Remove the liner. During removal spray detergent water onto the now facing up adhesive.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 8:

Prepare graphic installation:
Continuous spraying onto the adhesive during liner removal.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 9:

Install graphic:

Spray the detergent water onto complete application area.






Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 10:

Install graphic:
Pick the graphic from the window ...



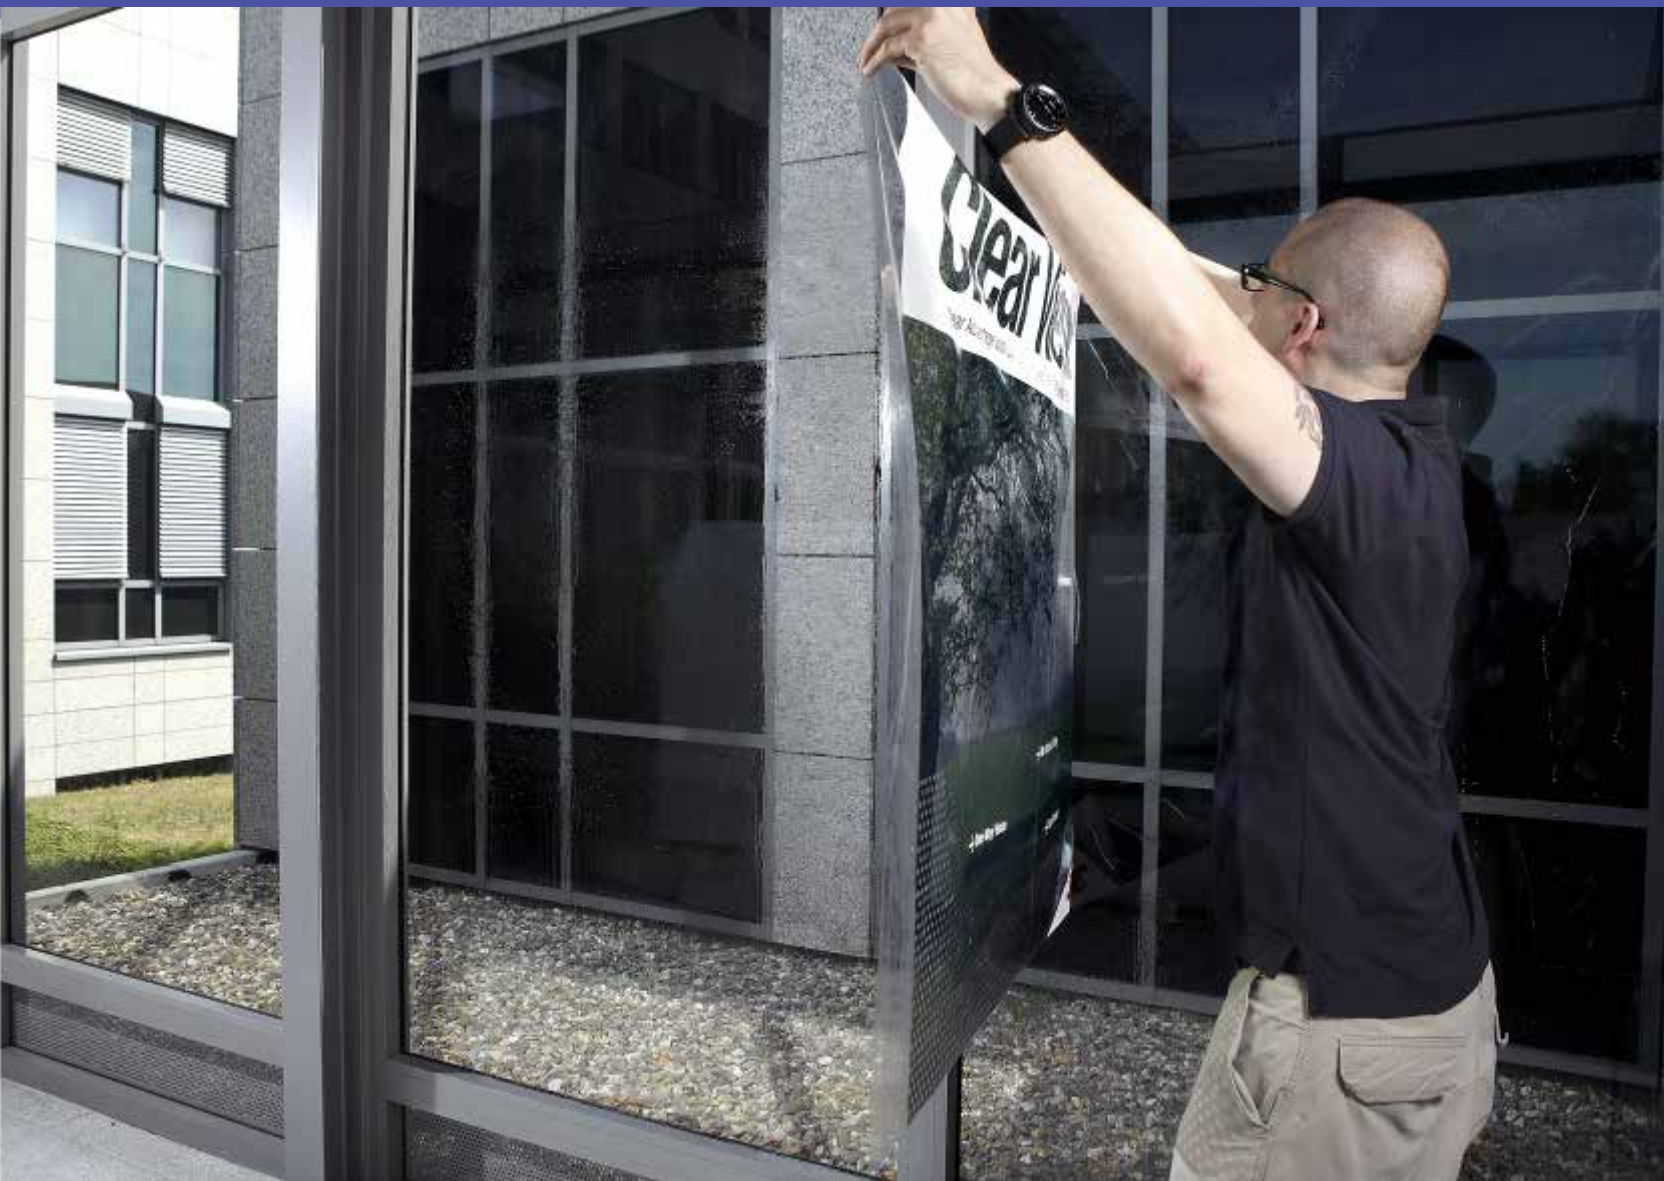

Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 11:

Install graphic:
... turn it. And ...





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 12:

Install graphic:
... position it on the application surface.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 13:

Install graphic:

Spray detergent water onto graphic. This is for scratch prevention!





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 14:

Install graphic:

Starting from the center, squeeze first horizontal and then vertical to fix graphic position.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 15:

Install graphic:

Spray again detergent water onto graphic. And always when you rework already applied areas.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 16:

Install graphic:

Squeeze the water out. Always start from the center to the different directions.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 17:

Install graphic:
Finished! Now ...





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 18:

Post work:

... spray again some detergent water on the graphic and ...





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 19:

Post work:
... clean the graphic with a towel.





Making a perfect wet application of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 20:

GOOD JOB!!

