

TeraPrint Produktunterlage

Gebrandete TeraPrint-Downloadunterlage

PRODUKT	WalltexPro®
UNTERLAGE	Application document WalltexPro®
TYP	other
ORIGINALSEITEN	1
STAND	16.06.2026
DATEI	products/walltex-pro/assets/documents/c378972c29185fa28b6917545646c3501ab77a2ba988be33495dd86254922362.pdf

Wichtig fuer die Produktion

Die folgenden Originalseiten bleiben in Format, Reihenfolge und Inhalt unveraendert.
Druckmass, Schnitt, Beschnitt, Sicherheitsbereiche und technische Vorlage wurden nicht veraendert.
Bei Zertifikaten, Datenblaettern und Pruefberichten bleiben Aussteller und Originalinhalte unveraendert.

TeraPrint Hinweis

Diese Datei ist lokal bei TeraPrint gespeichert und fuer den Kunden-Download vorbereitet.
Bitte bei Druckdaten immer die Massangaben und Beschnitt-/Sicherheitszonen der Originalvorlage beachten.
Bei Unsicherheit vor Bestellung oder Produktion TeraPrint kontaktieren.


Application Document

Important to know before you start:


- Make sure the wall has a smooth finish
- If the wall is porous, you should first cover the wall in primer. You can test if a wall is porous by putting water on the wall and see if it absorbs any of the moisture.
- Use our Wallpaper Paste Medium and a short-haired fleece roller or block brush.
- Give the paste a good stir before you get started. Note that the paste is **not** dilutable.
- Does your print consist of multiple pieces? Apply the pieces with an overlap and cut through both layers to create a seamless finish (download the 'Double cut through' document for an extensive instruction).

The application:

1. The wallpaper should be rolled up so that it can be rolled down from left to right (with the print facing you).

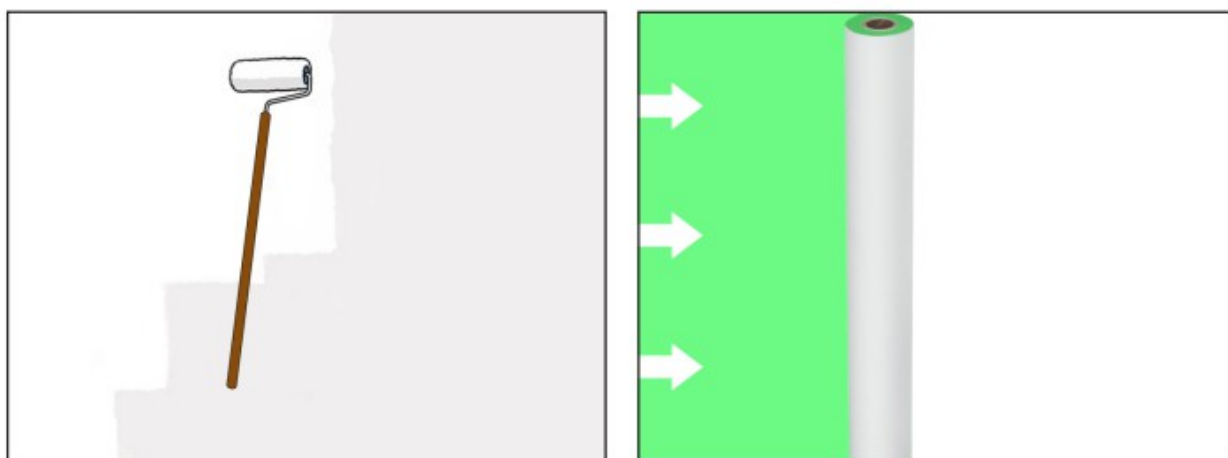

2. Cover the wall in a good amount of Wallpaper Paste Medium.
3. Take the print and align it in the left topcorner before unrolling the rest of the print. Only press the wallpaper onto the wall along the top.
4. Once you feel the wallpaper is in the right position you can start to apply the wallpaper to the wall by stroking the print down with an application spatula. Start at the top in the middle and work your way to the sides making strokes all the way down the wall.

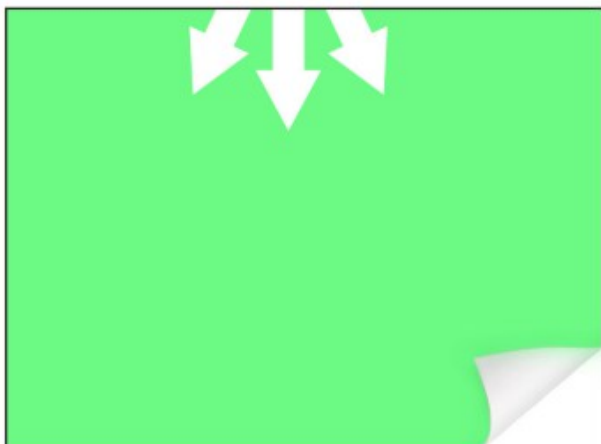

5. Cut away the excess material along the edges. Make sure to firmly press the edges once more with your spatula to ensure there is good adhesion.
6. Remove any paste residue that is on the print with clean water and gently dry the surface.